

DINING CART

USER MANUAL

Introduction

Thank you for purchasing this Maxima product. To ensure optimal and safe use, please read these instructions completely before attempting to install or use this product.

All Maxima products are manufactured with great care and are CE certified. As a result, our products meet the legal requirements within the European Union with regard to safety, health and the environment. In addition, our products are tested and inspected prior to shipment to ensure product quality and safety.

The Maxima Dining Cart is a Stainless Steel trolley ideally suited for transporting tableware and other small objects. The appliance is easily assembled, safe and low-maintenance due to it's durable contruction. Maxima Dining carts are available with either two or three levels.

At Maxima we are very proud of our products and are completely committed to providing you with the best products and service possible. Your satisfaction is our number one priority.

We trust you will enjoy using this product and Thank You for choosing Maxima Kitchen Equipment as your supplier. We hope you will consider Maxima for your future purchases.

Specifications

Name	Maxima Dining Cart	
Model	2 Levels	3 Levels
Product Code	09300545	09300546
Dimensions (WxDxH)	950 x 510 x 940 mm	
Weight	18 kg	22 kg
Material	Stainless Steel	
Maximum Total Load	100 kg	120 kg
Features	2 tray levels. 4 wheels (2 with brake) Bumpers on each corr	

General Safety Regulations

This machine may only be used for the purpose for which it was designed and intended. The manufacturer and supplier are not liable for any damage caused by incorrect operation and improper use.

- Do not insert any objects in the frame;
- Do not let children play with the machine;
- Keep all packaging away from children;
- Dispose of packaging in accordance with local, state and national regulations;
- Avoid overloading the machine.




Product Specific Safety Regulations

- This machine may only be used for its intended purpose: Transporting tableware or other small objects;
- Do not modify or adjust the frame;
- Do not sit, stand or transport people on the dining cart;
- O Donotrun when using the dining cart.


First Time Use

- Unpack and inspect your machine immediately after receipt. If there are any latent defects or damage to the machine then immediately contact your supplier.
- Save all packaging materials in case the machine needs to be returned or inspected by the freight carrier.
- Remove any protective film from all surfaces (if applicable).
- Read this instruction manual completely before attempting to install and operate this product. When in doubt, contact your supplier.
- Assemble therequired parts.
- Before using the appliance for the first time, i tis recommended to clean the appliance according to instructions (see chapter "cleaning and maintenance").

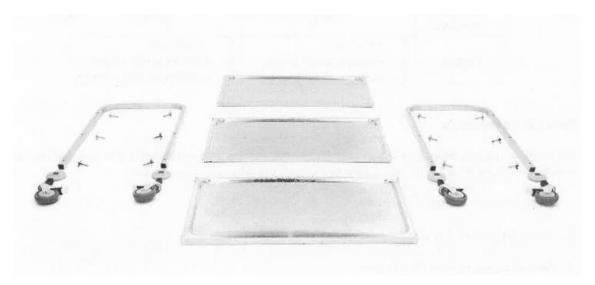


ASSEMBLY

MAINING CART 2 LEVELS

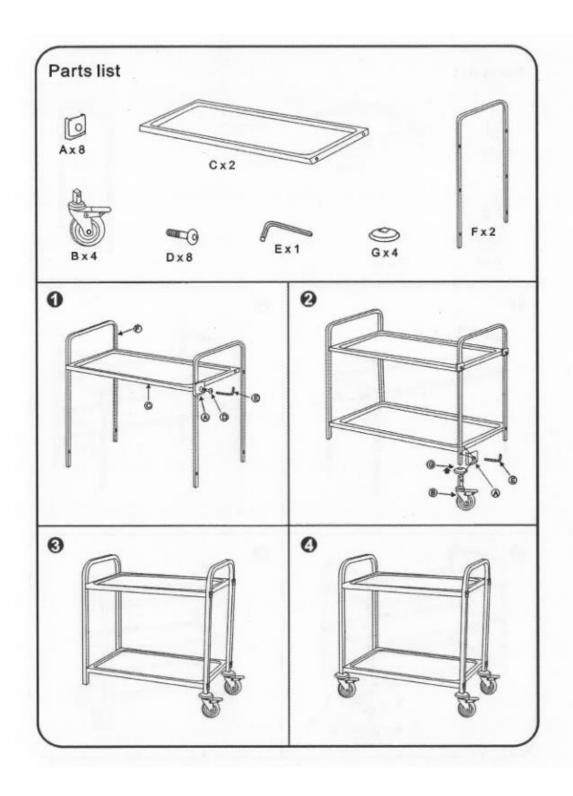

MAINING CART 2 LEVELS

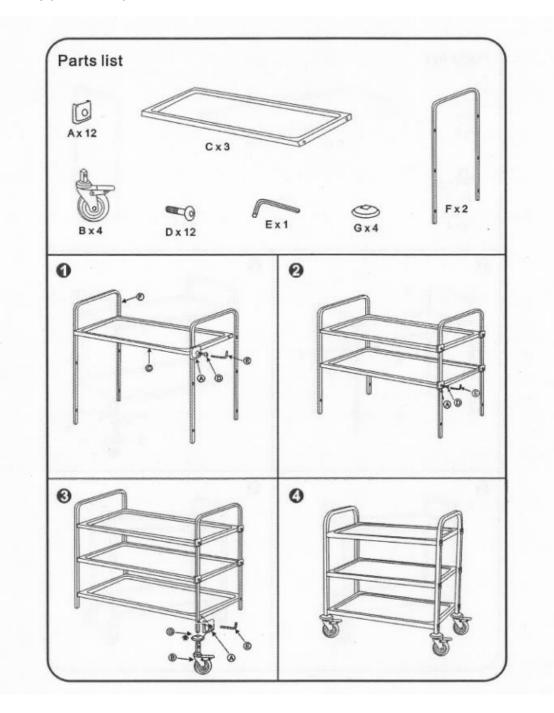

Operation

- Take into account the maximum load capacity when using the dining cart.
- Release brakes before moving the trolley.
- Secure brakes when not in use.

Cleaning and Maintenance

- Regularly check and clean the appliance, its parts and accessories (if applicable).
- ATTENTION! Never use aggressive cleaning agents or abrasives. Do not use solvents or petrol
 based cleaning agents. Some cleaning agents may leave harmful residues or cause damage
 to.the machine. Use a food safe detergent instead.
- ATTENTION! Do not use any scourer and sharp or pointed objects during cleaning, this may cause damage to the machine. Clean with a damp cloth or {soft) brush.
- ATTENTION! Never hose down the machine or immerse it in water or any other liquid.

Storage

- Make sure the appliance is cleaned properly before storage.
- Store in a cool and dry place.

Discarding

• When discarding the appliance, do so in compliance with local, state and national regulations.

Guarantee

Thank you for using our products, our company will follow related provisions from our "Algemene Voorwaarden", and provide you services when you can show us the invoice.

We provide 12-month warranty from the date of purchase (invoice date). In the warranty period, our company is responsible for free parts if there is a device fault or quality problem of spare parts under correct operation.

The following is not included in the free service:

- 1. Damages result from transportation, installation, improper connections.
- 2. Component damages caused by failing to provide power and voltage as required in technical data.
- 3. Damages caused by disassembling products, adjust or change the mechanical and electrical structures without permission.
- 4. Damage caused by improper operation, cleaning and maintenance.
- 5. Non-man-made damage, such as damages from abnormal voltage, fire, building collapse, lightning, floods and other natural disasters, and damages from rats and other pests.
- 6. Failure in following the manual when operating.
- 7. Wearable and expendable parts.
- 8. Altered invoice or without invoice.

In line with our policy of continuous development, we reserve the right to alter the product, the packaging or the documentation without prior notice.