

**P N H**

PROFESSIONAL  
FURNITURE  
& INNOVATION



## **INSTRUCTION MANUAL**

# **Work Table With Waste Chute Hole**

## GENERAL FEATURES

- General construction in quality stainless steel feeding area;
- Dismountable Bench;
- Legs tube 40x40 with height-adjustable bat;
- Right, left or centre collar available;
- Right, left or centre collar available.

## CHARACTERISTICS TABLE

 
 
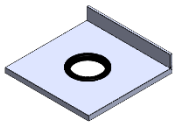 
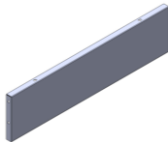 
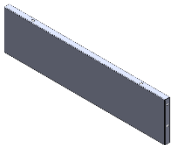 
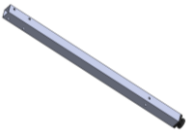 
Modelo	Dimensions Product LxPxA (mm)	Net weight. (Kg)	Gross Weight (Kg)	Packing dimensions WxDxH (mm)
600x600	600x600x950	12	13.4	650x648x215
700x600	700x600x950	13	14.4	750x648x215
800x600	800x600x950	14	15.4	850x648x215
1000x600	1000x600x950	16	17.4	1050x648x215
1200x600	1200x600x950	18	20	1250x648x215
1400x600	1400x600x950	20	22	1450x648x215
1500x600	1500x600x950	21	23	1550x648x215
1600x600	1600x600x950	22	24	1650x648x215
1800x600	1800x600x950	24	26	1850x648x215
2000x600	2000x600x950	26	28	2050x648x215
600x700	600x700x950	13	15.2	650x748x215
700x700	700x700x950	14	16.2	750x748x215
800x700	800x700x950	15	17.2	850x748x215
1000x700	1000x700x950	17	19.2	1050x748x215
1200x700	1200x700x950	19	22.4	1250x748x215
1400x700	1400x700x950	21	24.4	1450x748x215
1500x700	1500x700x950	22	26.4	1550x748x215
1600x700	1600x700x950	23	27.4	1650x748x215
1800x700	1800x700x950	25	28.4	1850x748x215
2000x700	2000x700x950	27	29.4	2050x748x215

## PRINCIPLE OF OPERATION


- The operation of the worktops with debris collar does not require energy consumption, being based on being a support for bags for depositing food waste from an Industrial kitchen;

## ASSEMBLY INSTRUCTION:


- Identify all the assembly elements (depending on the size and models chosen)

Mounting elements (depending on the dimensions and models chosen)						
1	Kit Set	Composed by: 24 x Screws M6x12 7x Screws M5x12		1	Back Crossbar	
				2	Lateral Transom	
1	Top with collar			2	Side panel	
2	Front and back panel			4	Props club legs	

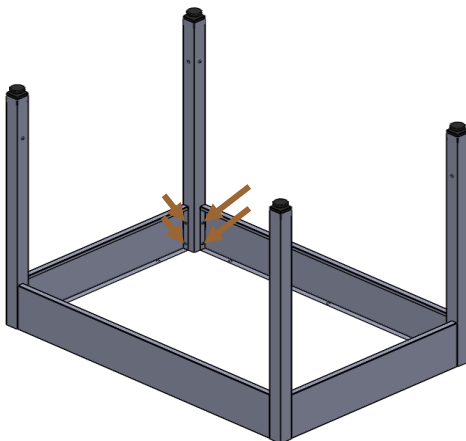 
2. Assemble the frame according to the picture (apply 16 M6 screws);



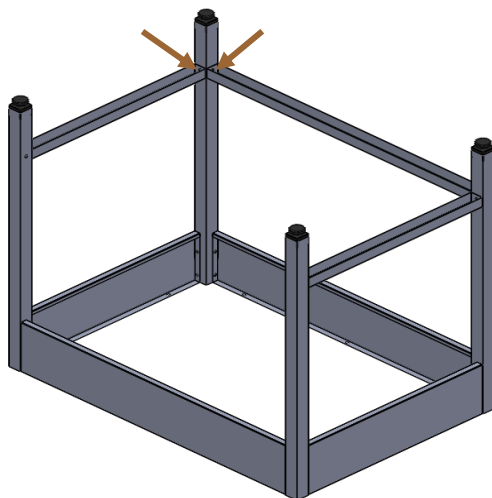 3. Apply the back and side rails as shown in the picture (apply 6 M6 screws);



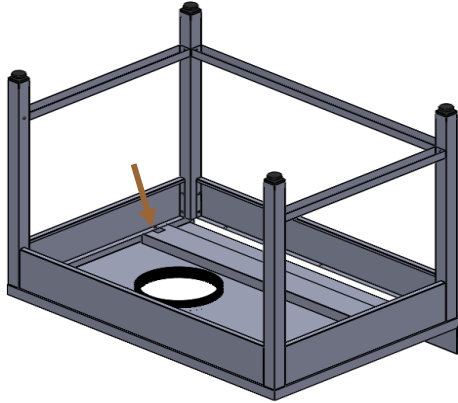 4. Fit the worktop and screw from below (7x M5 screws);



## INSTRUCTIONS FOR USE

- After assembling the worktop with debris collar install in the desired location.

## MAINTENANCE AND CLEANING

- As it contains no electrical parts, the appliance can be immersed in water for more effective cleaning.

When cleaning the appliance, do not use abrasive products that could damage it. We recommend the use of a stainless steel cleaner.

**WARRANTY**

- ❑ The equipment is guaranteed for a period of 12 months from the date of purchase.
- ❑ The guarantee is valid against original defects, whether material or manufacturing.
- ❑ Whenever there is an anomaly in the equipment, it should be returned as soon as possible, enclosing the purchase document.
- ❑ When the guarantee is activated, the damaged parts will be repaired or replaced at the manufacturer's discretion. In the event of replacement, the damaged parts will become the supplier's property.
- ❑ Any and all faults resulting from poor installation or use/handling of the equipment are excluded from the scope of the guarantee.
- ❑ The equipment will lose its guarantee whenever any alteration/modification or even repair carried out by the user is identified.

**PNH BY PINHA**  
**RUA DO ALTO - VALE DO GROU – APARTADO 86**  
**3750 - 064 AGUADA DE CIMA**

**TEL. +351 234 622 889    FAX. +351 234 624 044**

**[comercial@pnh-bypinha.pt](mailto:comercial@pnh-bypinha.pt)    [www.pnh-bypinha.pt](http://www.pnh-bypinha.pt)**